



 
550EX




420EX



220EX



Macro Twin Lite MT-24EX

 

Macro Ring Lite MR-14EX



Speedlite Transmitter ST-E2



Off-Camera Shoe Cord 2



TTL Hot Shoe Adapter 3*



Connecting Cord 60*



Connecting Cord 300*



TTL Distributor*



Off-Camera Shoe Adapter OA-2*

 
*Manual flash only with the EOS-1Ds, 1D Mark II and 1D. Not compatible with EOS 10D, D60 or D30. Not compatible with E-TTL, E-TTL II or distance information.



EOS-1Ds



EOS-1D Mark II



EOS 10D



EOS Digital Rebel



EOS-1v HS



EOS-1v



 
EOS-3



EOS ELAN 7nE/7n



EOS REBEL Ti




EOS REBEL K2




EOS REBEL GII


EOS-1Ds & EOS-1D Mark II Only

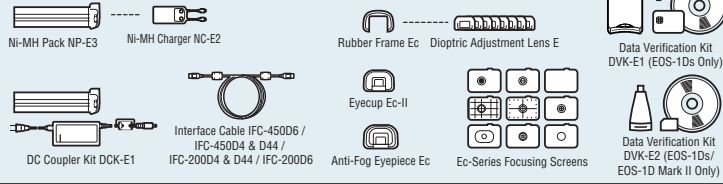


EOS 10D Only

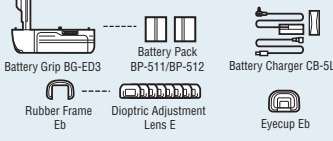


EOS 10D & EOS Digital Rebel Only

 


EOS Digital Rebel Only

 


*Requires RA-N3 with EOS-1Ds, EOS-1D Mark II, EOS-10D, EOS 10D, EOS D60, EOS D30 and EOS D2000

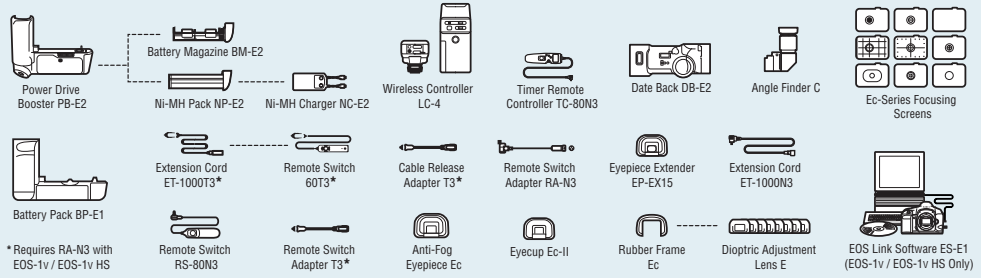

*Requires RA-N3 with EOS-1v / EOS-1v HS

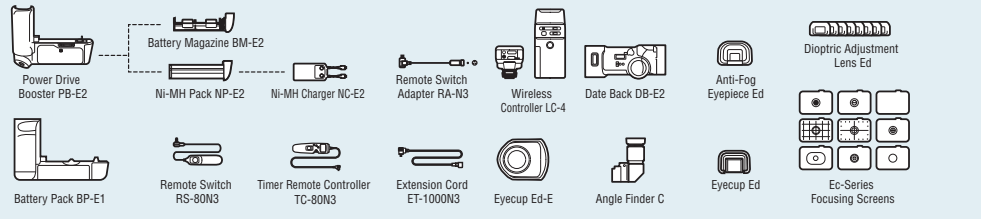

*EOS-3 Only

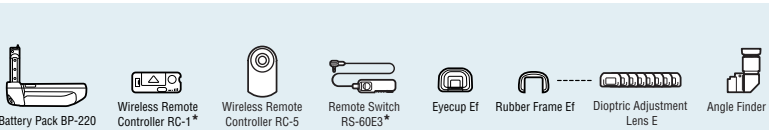

*EOS Rebel Ti only

